



RF UniPoint System Configuration



UniPoint RF System Configuration

Product Code/ Item Description	1 Zone	2 Zones	3 Zones	4 Zones	5 Zones	6 Zones	7 Zones	8 Zones
657176 Zonemaster UniPoint RF Main C/Bd								
657177 Zonemaster UniPoint RF Controller & Wall Bracket								
657154 NEAT 24V Transformer								
657095 Control Cable 12M		2	3	4	5	6	7	8
FULL KIT PRODUCT CODE	677050	677051	677052	677053	677054	677055	677056	677057

OPTION FOR BYPASS CONTROL SYSTEM

Product Code/ Item Description	1 Zone	2 Zones	3 Zones	4 Zones	5 Zones	6 Zones	7 Zones	8 Zones
657186 NEAT Supply Air Sensor c/w 7M lead								

NOTE:

- 1: Zonemaster VAV, Unipoint RF and Unipoint/Maxipoint are all 24 volt powered and therefore do not require installation by an Electrician in most states. However check local regulations before fitting.
- 2: All Zonemaster products come with an easy to follow installation manual/user guide. We recommend that this is read and followed during installation for a fault free job.
- 3: For current pricing [contact](#) your nearest Polyaire branch or representative.